

Langley Bridge with Spray



General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

- 1. Carefully lever away the hot screw cover cap (B1) from the handle (B3).
- 2. Unscrew handle screw (B2) and pull the handle (B3) away from valve (B5)
- 3. Unscrew (by hand) decorative valve cover (B4) from valve (B5).
- 4. Using a 17mm ring spanner and whilst holding the tap body (D1) firmly, unscrew hot valve (B5) from the tap body (D1)
- 5. Clean the Inside of the valve chamber of the tap body (D1) with a soft wet cloth.
- 6. Locate the new valve (B5) and reassemble the tap in reverse order.

To replace the spout o-rings:

- 1. Fully unscrew spout locking collar (A3) by hand.
- 2. Gently ease away spout (A2) from the tap body (D1)
- 3. With a soft damp cloth clean the inside of spout chamber of tap body (D1)
- 4. Remove worn o-rings (A5) and PTFE ring (A4) using a precision screwdriver.
- 5. Reassemble the tap with the new PTFE ring (A4) and o-rings (A5) in reverse order.

To replace the handspray and seal:

- 1. Lift handspray (H1) from base (K1)
- 2. Unscrew handspray (H1) from hose connection (J1)
- 3. Screw the new handspray onto connection (J1) ensuring rubber seal (H3) is in place.