



Astbury 3 Part

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Unscrew grub screw (C1) using a 2mm Allen key.
2. Pull handle (C2) away from valve (E1)
3. Unscrew decorative cover (C3) by hand and pull vertically away from valve (E1).
4. Using a 17mm ring spanner and whilst holding the valve body (E2) firmly, unscrew and remove cold valve (E1).
5. Clean the inside of the valve chamber of the valve body (E2) with a soft damp cloth.
6. Locate the new valve (E1) and reassemble the tap in reverse order.

To replace the spout o-rings:

1. Fully unscrew spout locking collar (A3) by hand.
2. Gently ease away spout (A2) from the tap body (D1)
3. With a soft damp cloth clean the inside of spout chamber of tap body (D1)
4. Remove worn o-rings (A5) and PTFE ring (A4) using a precision screwdriver.
5. Reassemble the tap with the new PTFE ring (A4) and o-rings (A5) in reverse order.